


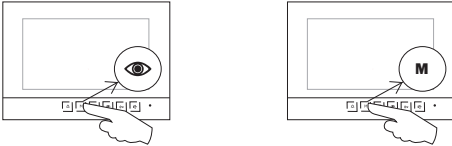 


5.2.11 OSD menu and picture memory


5.2.11.1 Operation on OSD menu

 
Push  button to activate the screen. Then push **M** button to activate the OSD menu. There are the items of brightness, contrast, color, language, date, time, and delete all. Users may push  button (+) and  button (-) to adjust the parameters, and push **M** button to confirm or skip them.



5.2.11.2 Picture memory

 
A. Capture images

The indoor phone will capture the visitor's image automatically if nobody answers the call after 3 seconds. *But the captured images will be canceled automatically if the call was answered at last.* Users also may push  button to capture the image and store it during the communication.

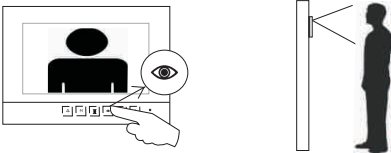 





B. Review the stored images

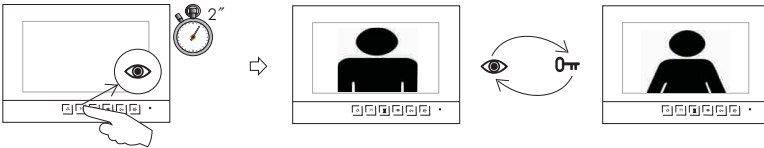Push  button and do not release it for 2 seconds. The indoor phone will sound a double beep. The latest stored image will display. Users may push  or  buttons to turn the pages.



C. Delete the stored images

During the reviewing status push  button and do not release it for 2 seconds. The dialogue box will display. At this moment push  button again, then the viewing page will be deleted. Then push " + " buttons to exit.

Ⓜ In case all recorded images need to be canceled, users may go to the OSD menu (as 5.2.11.1).

